

INDEX

A

Air box	229-230
Alternator	235-236
cover	148-150
Axles	
front drive	285-292
rear	310-313

B

Battery.	74-76
capacity	105
Bleeding, brake	342-345
Body	
center mud guards, FE and TE models	362
front	
bumper	361-362
carrier	360-361
fender	363-364
mud guards	362
fuel tank cover	360
handlebar cover	366
headlight grill	364
rear	
carrier	364
fender	364-365
mud guards, FM and TM models	362
recoil starter cover	359
retaining	
clips	359

tabs	359
seat	359
side covers	359-360
tool box	365
Brakes	
bleeding	342-345
drum and front hub, two-wheel drive	266-268
fluid draining.	342
front	
drum	327-331
hose replacement	351-352
master cylinder	338-342
panel.	333-335
service specifications.	354
shoe replacement	331-333
rear	
drum	345-346
lever/parking brake cable.	353
panel.	347-351
pedal and cable	352-353
service specifications.	354
shoe replacement	346-347
service.	326-327
torque specifications	354
troubleshooting	71
wheel cylinders	335-338
Bulbs, replacement	261
Bumper, front	361-362

C

- Cable and pedal, rear brake 352-353
- Camshaft 132-137
- Carburetor 212-221
 - adjustments 221-223
 - float level inspection 221
 - heater 223-225
 - specifications 230
- Carrier
 - front 360-361
 - rear 364
- Centrifugal clutch
 - and primary drive gear 187-191
 - service specifications 198
- Change clutch service specifications. 199
- Charging system 233-235
 - specifications 260
 - troubleshooting 43-44
- Choke cable replacement 230
- Clutch
 - assemblies 187
 - centrifugal
 - and primary drive gear 187-191
 - service specifications. 198
 - change. 191-198
 - service specifications. 199
 - cover 181-184
 - lever assembly. 185-187
 - torque specifications 199
 - troubleshooting 55-56
- Combination meter 254
 - troubleshooting 51
- Control arms 276-278
- Cooling
 - fan, except TRX350TM. 356-358
 - system, troubleshooting 47-50
- Countershaft service specifications 211
- Crankcase
 - and crankshaft. 164-177
 - cover, rear 150-152
- Crankshaft service specifications 179
- Cylinder 122-125
 - head
 - and rocker arms and pushrods 110-116
 - cover. 109-110
 - master, front. 338-342
 - troubleshooting, leak down test 55

D

- Differential, front 295-305

- and rear, oil capacity 105
- Dimensions, general. 29-30
- Diode 245-246
- Drive mechanism, front
 - four-wheel drive
 - differential. 295-305
 - drive axles 285-292
 - driveshaft 292-295
 - specifications. 305
 - torque 306
- Drive, rear, torque specifications 325
- Driven
 - gear, starter, service specifications 179
 - pulley 148
- Driveshaft 292-295, 321
- Drivetrain, troubleshooting 69-70
- Drum, brake
 - front 327-331
 - rear 345-346

E

- Electric shift trouble codes
 - 2003 FE and TE models
 - troubleshooting 71
- Electrical system
 - alternator 235-236
 - charging system 233-235
 - combination meter 254
 - component replacement. 231-233
 - diode 245-246
 - fundamentals 20-22
 - fuses. 259-261
 - ignition system 236-239
 - lighting system 251-253
 - oil thermosensor. 258-259
 - replacement bulbs 261
 - shift system 246-251
 - specifications
 - charging system 260
 - ignition system peak voltage 261
 - starter service. 261
 - torque. 261
 - speed sensor unit 259
 - starter 239-244
 - relay switch 244-245
 - switches 254-258
 - troubleshooting, starting 41-43
 - wiring diagrams 375-385
- Engine
 - and frame serial numbers 29

- lower end 140-144
 - alternator cover 148-150
 - break-in. 178
 - crankcase and crankshaft 164-177
 - driven pulley 148
 - flywheel and starter clutch. 152-156
 - gearshift linkage 156-159
 - oil
 - pump 160-164
 - strainer screens. 164
 - rear crankcase cover 150-152
 - recoil starter 144-147
 - reverse shaft assembly 159-160
 - servicing in frame. 139
 - specifications
 - general 179
 - crankshaft service 179
 - oil pump service 179
 - starter driven gear service 179
 - torque 179
 - transmission shifting check. 177
 - oil capacity. 105
 - top end
 - camshaft. 132-137
 - cleanliness 107
 - cylinder head 122-125
 - cover 109-110
 - rocker arms and pushrods 110-116
 - exhaust system. 107-109
 - piston, and rings 125-132
 - specifications
 - general 137
 - service. 137-138
 - torque 138
 - valves, and components 116-122
 - troubleshooting 53-54
 - noises. 54-55
 - overheating. 51-53
 - starting 36-37
 - tune-up 95-102
 - ESP reduction gears
 - FE and TE models. 180-181
 - Exhaust system 107-109
- F**
- Fasteners 4-6
 - Fender
 - front. 363-364
 - rear 364-365
- F**
- Final drive
 - specifications
 - and rear suspension 325
 - rear drive torque 325
 - unit 313-321
 - Flywheel and starter clutch 152-156
 - Frame noise, troubleshooting 70-71
 - Fuel system
 - air box. 229-230
 - carburetor 212-221
 - adjustments 221-223
 - float level inspection 221
 - heater 223-225
 - specifications. 230
 - choke cable replacement 230
 - tank 227-229
 - cover 360
 - specifications. 230
 - throttle housing and cable 225-227
 - troubleshooting 51
 - valve 229
 - Fuel, and recommended lubricants. 105
 - Fuses 259-261
- G**
- Gearshift linkage 156-159
 - General information
 - basic service methods 22-28
 - dimensions. 29-30
 - electrical system fundamentals. 20-22
 - engine and frame serial numbers. 29
 - fasteners 4-6
 - safety 2-3
 - serial numbers 3-4
 - shop supplies 6-8
 - specifications
 - torque 31
 - weight 30
 - tools
 - basic 9-15
 - precision measuring 15-20
- H**
- Handlebar. 279-280
 - cover 366
 - Handling, troubleshooting 70
 - Headlight grill 364
 - Hose replacement, front brake 351-352

Hub, front
 and brake drum, two-wheel drive 266-268
 four-wheel drive. 268-269

I

Ignition system 236-239
 peak voltage specifications. 261
 troubleshooting 44-46
 Internal shift mechanism 208-209
 shift fork service specifications 211

K

Knuckle, steering 273-276

L

Lever assembly, clutch 185-187
 Lighting system. 251-253
 troubleshooting 46-47
 Lubrication
 and maintenance schedule. 103-104
 engine oil capacity 105
 front and rear differential oil capacity 105
 periodic 77-82
 recommended lubricants and fuel 105
 unscheduled 82-83

M

Mainshaft service specifications. 211
 Maintenance
 and lubrication schedule. 103-104
 battery 74-76
 capacity. 105
 periodic 83-95
 pre-ride check list 72-73
 schedule 73
 specifications 106
 toe-in/out 105
 torque 104-105
 storage 102-103
 tire inflation pressure. 104
 tires and wheels 73-74
 Mud guards
 center, FE and TE models 362
 front 362
 rear, FM and TM models 362

O

Oil
 capacity
 engine 105

front and rear differential 105
 cooler 355-356
 hoses 355
 pump 160-164
 service specifications. 179
 strainer screens. 164
 thermosensor 258-259

P

Parking brake cable/rear brake lever. 353
 Peak voltage specifications
 ignition system. 261
 Pedal and cable, rear brake 352-353
 Piston, and rings 125-132
 Primary drive gear
 and centrifugal clutch 187-191
 ESP reduction gears
 FE and TE models 180-181
 service specifications 199
 Pushrods
 rocker arms and cylinder head 110-116

R

Rear axle 310-313
 driveshaft 321
 Recoil starter 144-147
 cover 359
 Reduction gears, ESP
 FE and TE models. 180-181
 Retaining
 clips 359
 tabs. 359
 Reverse
 idle gear
 assembly 206
 service specifications. 211
 selector cable replacement 209-210
 shaft assembly. 159-160
 Reverse/transmission system
 identification. 200
 Rocker arms
 and pushrods and cylinder head 110-116

S

Seat 359
 Shaft, steering. 281-283
 Shift
 fork service specifications 211
 system, electric 246-251

- Shock absorbers 269-270, 308-310
 - Shoe replacement
 - front brake 331-333
 - rear brake 346-347
 - Side covers 359-360
 - Specifications
 - carburetor 230
 - charging system 260
 - front drive 305
 - fuel tank 230
 - general
 - engine 137, 179
 - transmission 210
 - ignition system peak voltage 261
 - maintenance 106
 - rear suspension and final drive 325
 - service
 - brake
 - front 354
 - rear 354
 - centrifugal clutch 198
 - change clutch 199
 - countershaft 211
 - engine
 - lower end 179
 - top end 137-138
 - mainshaft 211
 - primary drive gear 199
 - oil pump 179
 - reverse idle gear 211
 - shift fork 211
 - starter 261
 - driven gear 179
 - steering and front suspension 283
 - torque
 - brake 354
 - clutch 199
 - electrical system 261
 - engine 138
 - lower end 179
 - front drive 306
 - front suspension and steering 284
 - general 31
 - maintenance 104-105
 - rear drive 325
 - weight 30
 - Speed sensor unit 259
 - Starter 239-244
 - clutch, and flywheel 152-156
 - recoil 144-147
 - relay switch 244-245
 - specifications 261
 - driven gear service 179
 - Starting troubleshooting
 - difficulty 37-41
 - electric system 41-43
 - the engine 36-37
 - Steering
 - and front suspension, specifications 283
 - torque 284
 - control arms 276-278
 - handlebar 279-280
 - knuckle 273-276
 - shaft 281-283
 - tie rods 270-273
 - Storage 102-103
 - Supplies, shop 6-8
 - Suspension
 - front
 - and steering, specifications 283
 - torque 284
 - hub
 - and brake drum, two-wheel drive 266-268
 - four-wheel drive 268-269
 - shock absorbers 269-270
 - tires
 - and wheels 263-266
 - specifications 284
 - inflation pressure 284
 - wheel 262-263
 - rear
 - and final drive specifications 325
 - shock absorber 308-310
 - swing arm 321-325
 - wheels 307-308
 - Swing arm 321-325
 - Switches 254-258
- T**
- Tank, fuel 227-229
 - specifications 230
 - Thermosensor, oil 258-259
 - Throttle housing and cable 225-227
 - Tie rods 270-273
 - Tires
 - and wheels 73-74, 263-266
 - specifications 284
 - inflation pressure 104, 284
 - Toe-in/out specifications 105
 - Tool box 365

- Tools
 - basic. 9-15
 - precision measuring 15-20
 - Torque specifications
 - brake 354
 - clutch. 199
 - drive
 - front 306
 - rear 325
 - electrical system 261
 - engine 138
 - lower end. 179
 - front suspension and steering. 284
 - general. 31
 - maintenance. 104-105
 - Transmission
 - and reverse system identification. 200
 - inspection 206-208
 - overhaul. 200-206
 - reverse
 - idle gear, assembly 206
 - selector cable replacement. 209-210
 - shifting check 177
 - specifications
 - general 210
 - countershaft 211
 - mainshaft. 211
 - reverse idle gear 211
 - troubleshooting. 56-69, 200
 - Troubleshooting
 - brakes 71
 - charging system 43-44
 - clutch 55-56
 - combination meter. 51
 - cooling system. 47-50
 - cylinder leak down test 55
 - drivetrain 69-70
 - electric shift trouble codes
 - 2003 FE and TE models 71
 - engine 53-54
 - noises. 54-55
 - overheating. 51-53
 - frame noise. 70-71
 - fuel system 51
 - handling 70
 - ignition system. 44-46
 - lighting system. 46-47
 - operating requirements 34-35
 - poor performance
 - idle speed 41
 - medium and high speed 41
 - starting
 - difficulty 37-41
 - electric system 41-43
 - the engine 36-37
 - transmission 56-69, 200
 - Tune-up, engine 95-102
- V**
- Valves
 - and components 116-122
 - fuel. 229
- W**
- Weight, specifications. 30
 - Wheels
 - and tires 73-74, 263-266
 - specifications. 284
 - cylinders 335-338
 - front. 262-263
 - rear 307-308
 - Wiring diagrams 375-385

Copyright of Honda TRX350 RANCHER, 2000-2006 is the property of Penton Media, Inc. ("Clymer") and its content may not be copied or emailed to multiple sites or posted to a listserv without the copyright holder's express written permission. However, users may print, download, or email articles for individual use.